


PARTS LIST

“Quicher” (NJ-23 / NJ-45 series) (Precision Screw Feeder) [Type A]


Available models:-

NJ-2320, NJ-2323, NJ-2326, NJ-2330

NJ-4535, NJ-4540, NJ-4550,

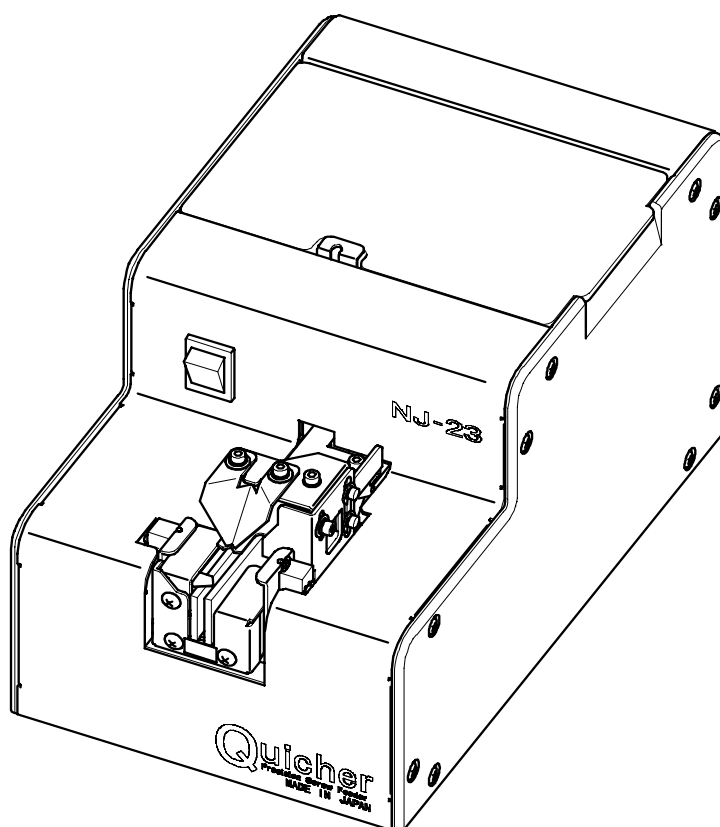


OHTAKE-ROOT KOGYO CO., LTD

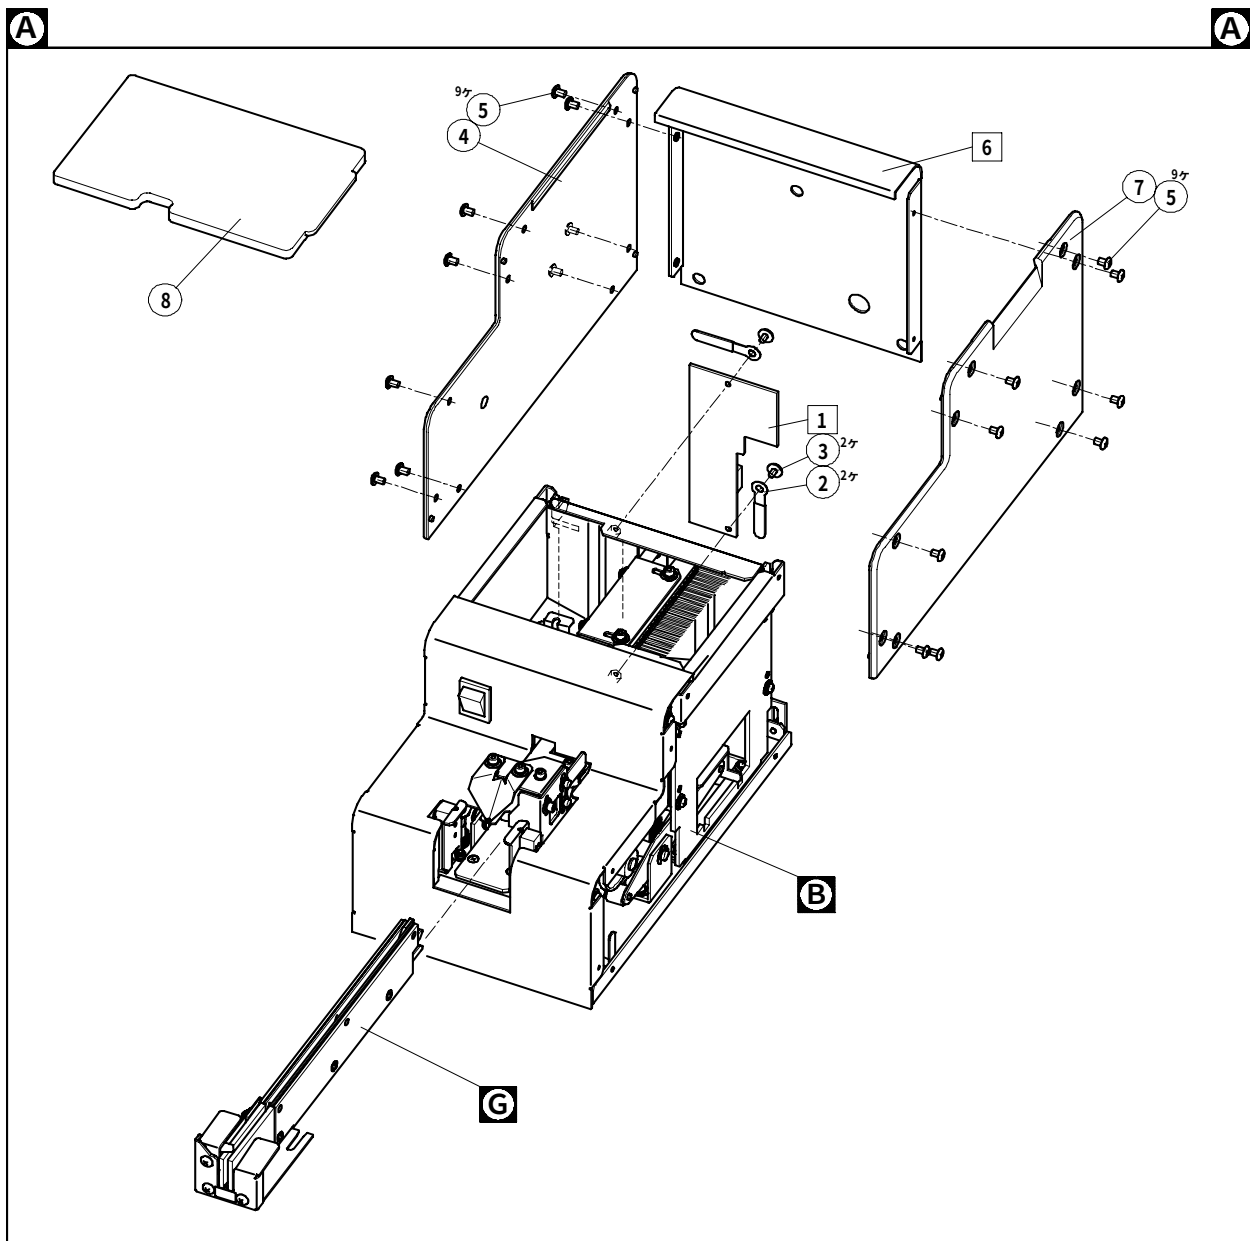

No	Name of Part	Part Number	Q'ty	Unit Price
B	Block "B" Assembly	-	1	
※ 1	Circuit Board	NJ09500d	1	
2	Coaching Clip	CS-9	2	
3	Pan Head Screw C	M2.6x5	2	
4	Side Cover - Left	NJ08013b	1	
5	Plus Truss Head Screw	M2.6x4	18	
※ 6	Rear Cover CP (NJ23)	NJ08102	1	
	Rear Cover CP (NJ45)	NJ08103		
7	Side Cover - Right	NJ08014a	1	
G	Block "G" Assembly	NJ06001c #01~#07	1	
	(M2:R20, M2.3:R23, M2.6:R26, M3:R30, M3:R35, M4:R40, M5:R50)			
8	Upper Cover	NJ08015b	1	

※ When ordering the parts marked with※, please indicate the serial number printed on the bottom of each unit


◎ The "Block Assembly" without price cannot be supplied independently.

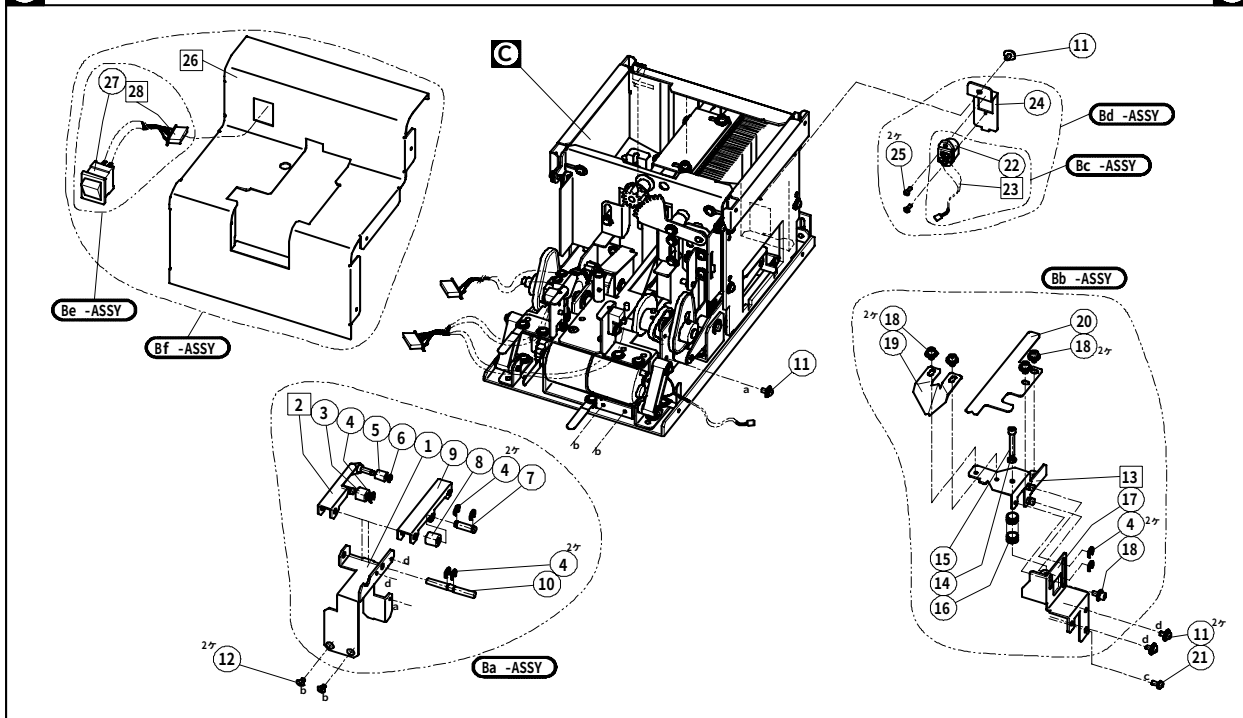B**B**

No	Name of Part	Part Number	Q'ty	Unit Price
C	Block "C" Assembly	—	1	
1	Cam Link Holder	NJ04031a	1	
2	Shutter Link	NJ04018a	1	
3	Duracon Spacer	C-406	1	
4	E-type Snap Ring	#3 SUS	7	
5	Duracon Spacer	C-306	1	
6	E-type Snap Ring	#2,SUS	1	
7	Brush Link Shaft	NJ04022a	1	
8	Duracon Spacer	C-407	1	
9	Brush Link	NJ04021b	1	
10	Cam Link Shaft	NJ04024a	1	
11	Pan Head Screw CP	M2.6x5	4	
12	Plus Socket Head Screw	M2.6x4	2	
13	Bit Guide Bracket #2	NJ05012a #01	1	
14	Spring Washer	M2.6	1	
15	Hex. Socket Heas Bolt	M2.6x 20	1	
16	Compression Spring	AP070-023-0.6	1	
17	Bit Guide Bracket #1	NJ05011e	1	
18	Hex. Socket Head Bolt CP	M2.6x5	5	
19	Bit Guide	NJ05016a	1	
20	Screw Guide #1	NJ05015c	1	
21	Pan Head Screw CP	M2.6x5	1	
22	Power Plug	NJ02033b #02	1	
※ 23	Power Plug Harness	NJ09581 #04	1	
24	Jack Bracket	NJ02032a	1	
25	Plus Socket Head Screw	M2x5	2	
26	Front Cover	NJ08011e	1	
27	Power Switch	JW-S11RKKR	1	
※ 28	Power Switch Harness	NJ09581 #03	1	
Ba-ASSY	Cam Link Holder Assembly	NJ04010a	1	
Bb-ASSY	Bit Guide Assembly	NJ05001b #02	1	
※ Bc-ASSY	Power Plug Assembly	NJ09582 #04	1	
※ Bd-ASSY	DC Jack Assembly	NJ02003b	1	
※ Be-ASSY	Power Switch Assembly	NJ09582 #03	1	
※ Bf-ASSY	Front Cover Assembly	NJ02007 #02	1	

※ When ordering the parts marked with ※, please indicate the serial number printed on the bottom of each unit


© The "Block Assembly" without price cannot be supplied independently.

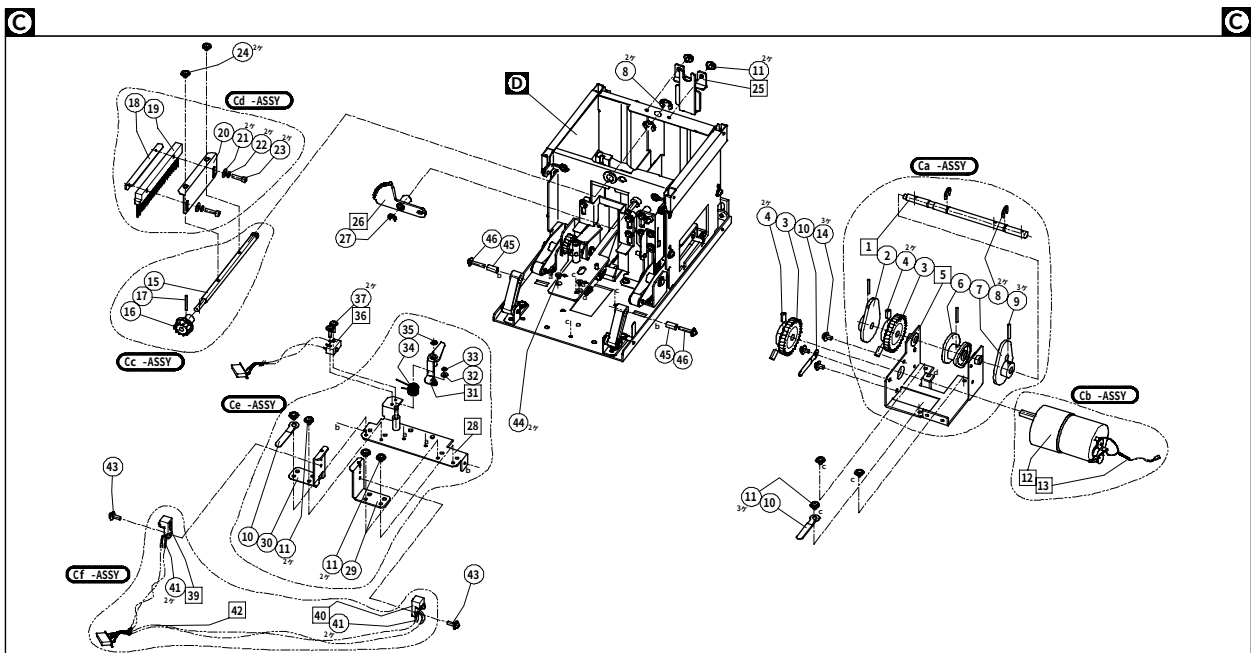

No	Name of Part	Part Number	Q'ty	Unit Price
D	Block "D" Assembly	-	1	
1	Driving Shaft	NJ04100	1	
2	Driving Cam - Left	NJ04014e	1	
3	Driving Gear #1	NJ04013b	2	
4	Hex. Socket Head Set Screw CP	M4x8	4	
5	Motor Bracket	NJ04029	1	
6	Brush Shutter Cam	NJ04016c	1	
7	Driving Cam - Right	NJ04015e	1	
8	E-type Snap Ring	#5 SUS	4	
9	Spring Pin	#2.5x16	3	
10	Coaching Clip	CS-9	3	
11	Pan Head Screw CP	M2.6x5	9	
12	Main Motor with Condenser	NJ04005a	1	
13	Main Motor Harness	NJ09581 #05	1	
14	Pan Head Screw CP	M3x6	3	
15	Brush Driving Shaft	NJ02036b	1	
16	Brush Driving Gear #2	NJ02035c	1	
17	Spring Pin	#2x16	1	
18	Brush Bracket #2	NJ02040a	1	
19	Brush	NJ02039a #01	1	
20	Brush Bracket #1	NJ02038b	1	
21	Plain Washer	M2.6	2	
22	Spring Washer	M2.6	2	
23	Hex. Socket Head Bolt	M2.6x10	2	
24	Pan Head Screw CP	M2.6x5	2	
25	Closing Plate - Rear M3 (NJ23)	NJ02013a	1	
26	Rear Closing Plate M5 (NJ45)	NJ02043a	1	
27	Rear Closing Plate M5 (NJ45)	NJ02023a	1	
28	E-type Snap Ring	#3 SUS	1	
29	Rail Holder #2	NJ03041	1	
※ 29	Senser Bracket - Right	NJ03036g	1	
※ 30	Senser Bracket - Left	NJ03035g	1	
31	Switch Link (NJ23)	NJ03043a #01	1	
32	Switch Link (NJ45)	NJ03043a #02	1	
33	Duracon Spacer	C-2001	1	
34	E-type Snap Ring	#1.5	1	
35	Switch Link Spring	NJ03047a	1	
36	E-type Snap Ring	#2	1	
※ 36	Take-Out Sensor	NJ09582 #01	1	
37	Pan Head Screw CP	M2x10	2	
※ 39	Light Emitter Sensor	NSB04054	1	
※ 40	Light Receiver Sensor	NSB04055	1	
41	Heat Contraction Tube	φ1x10	4	
※ 42	Front Senser Harness	NJ09581 #02	1	
43	Pan Head Screw CP	M2.6x6	2	
44	Plus Socket Head Screw	M2.6x4	2	
45	Brass Spacer	CB-2609E	2	
46	Pan Head Screw CP	M2.6x14	2	
Ca-ASSY	Motor Bracket Assembly	NJ04008a	1	
※ Cb-ASSY	Main Motor Assembly	NJ09582 #05	1	
Cc-ASSY	Brush Driving Shaft Assembly	NJ02004a	1	
Cd-ASSY	Brush Assembly	NJ02005a #02	1	
Ce-ASSY	Rail Holder #2 Assembly (NJ23)	NJ03008c #02	1	
	Rail Holder #2 Assembly (NJ45)	NJ03008c #03	1	
※ Cf-ASSY	Front Senser Assembly	NJ09582 #02	1	

※ When ordering the parts marked with ※, please indicate the serial number printed on the bottom of each unit


© The "Block Assembly" without price cannot be supplied independently.

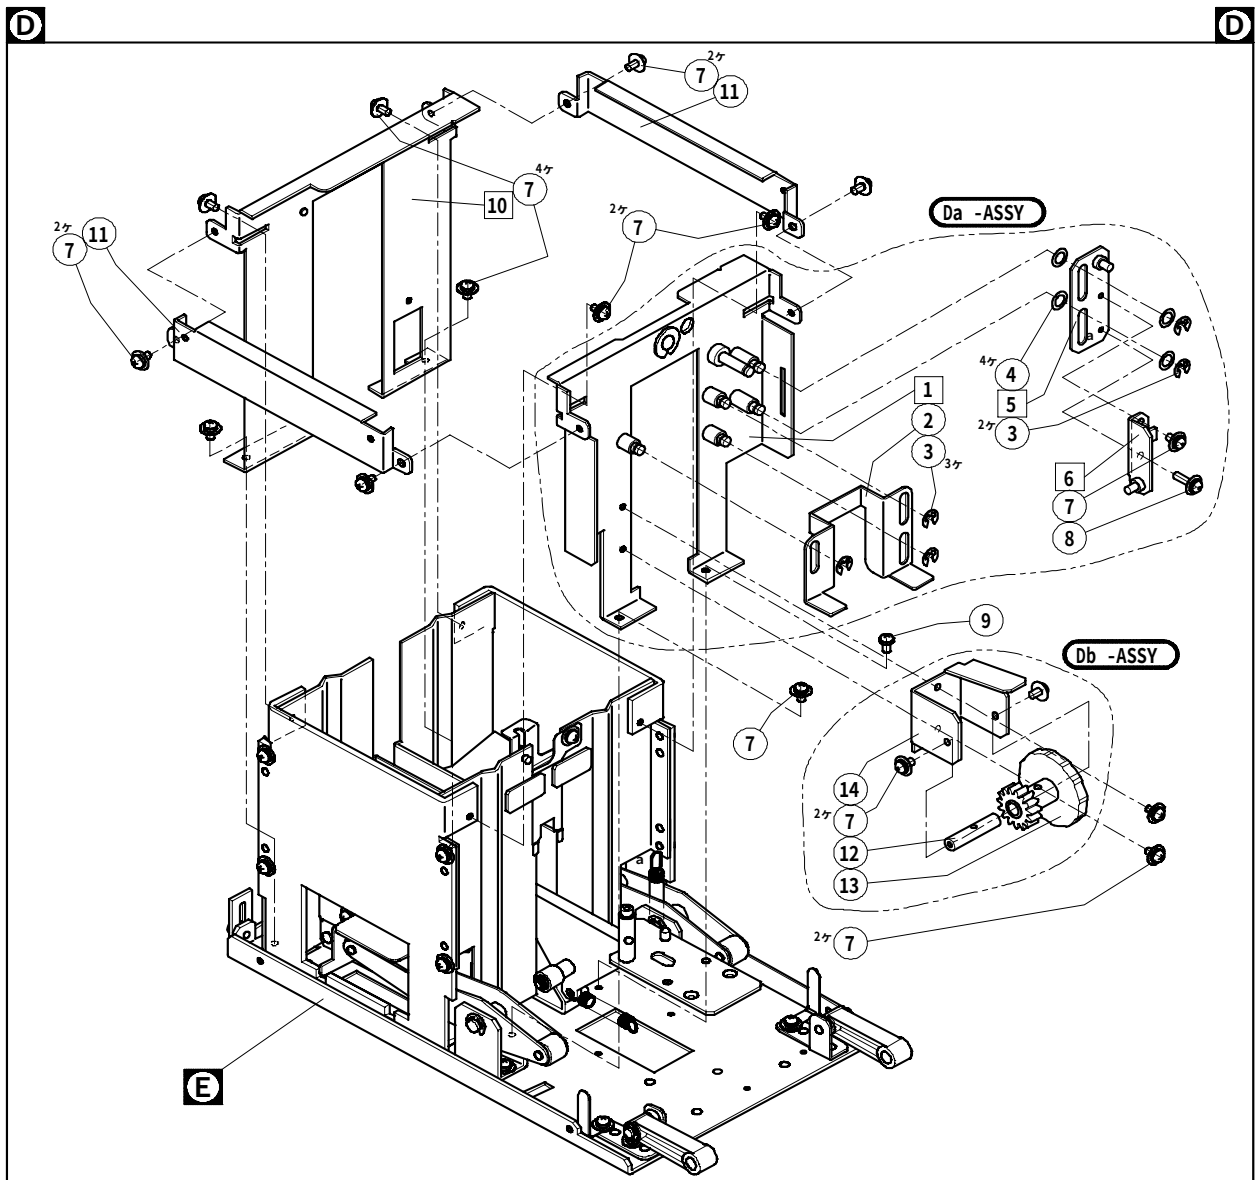

No	Name of Part	Part Number	Q'ty	Unit Price
E	Block "E" Assembly	-	1	
1	Brush Holder Plate - Front	NJ02014a	1	
2	Shutter Plate	NJ02019a	1	
3	E-sypte Snap Ring	#3 SUS	5	
4	Polyurethan Slider	4.5x7.2xt0.13	4	
5	Slide Plate #1	NJ02026a	1	
6	Slide Plate #2	NJ02029a	1	
7	Pan Head Screw CP	M2.6x5	16	
8	Pan Head Screw CP	M2.6x12	1	
9	Pan Head Screw CP	M2.6x5	1	
※ 10	Brush Holder Plate - Rear	NJ02002b	1	
11	Cover Bracket	NJ02042c	2	
12	Vibration Cam Roller	NJ02021a	1	
13	Vibration Cam	NJ02022b	1	
14	Vibration Cam Bracket	NJ02020c	1	
Da-ASSY	Brush Holder Plate Assembly	NJ02006b	1	
Db-ASSY	Vibration Cam Assembly	NJ02001b #02	1	

※ When ordering the parts marked with※, please indicate the serial number printed on the bottom of each unit.

◎ The "Block Assembly" without price cannot be supplied independently.

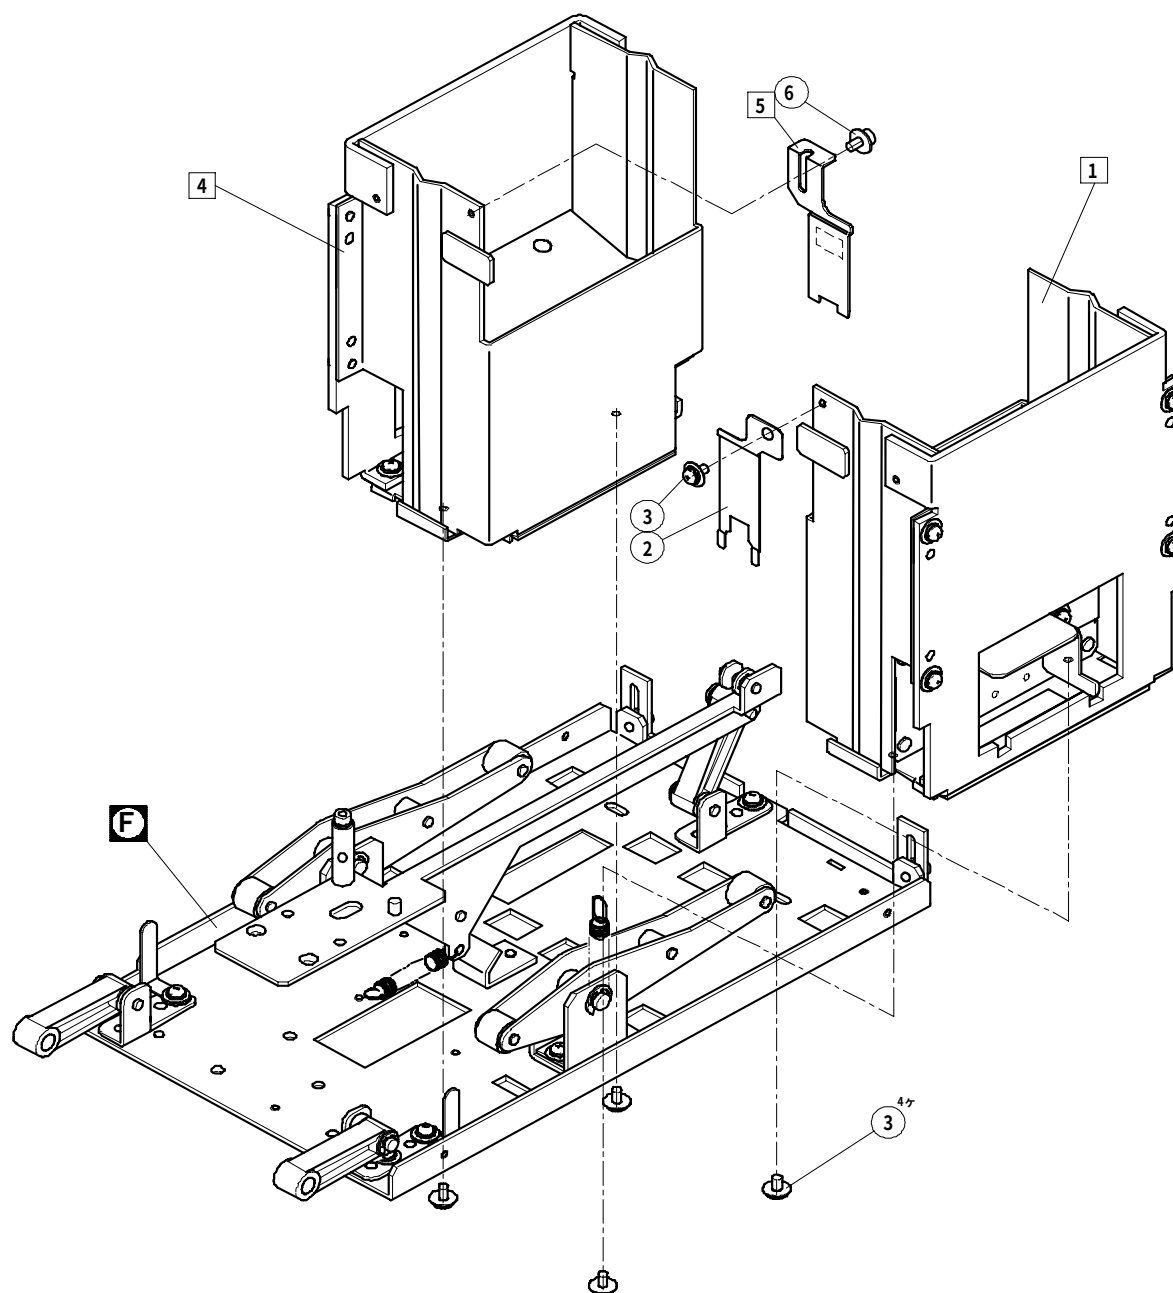
E**E**

No	Name of Part	Part Number	Q'ty	Unit Price
F	Block "F" Assembly	-	1	
1	Hopper - Right CP	NJ01001b #02	1	
2	Passing Plate #2 (NJ23, Passing Plate #2 (NJ45)	NJ01029b NJ01031b	1 1	
3	Pan Head Screw CP	M2.6x5	5	
4	Hopper - Left CP	NJ01000b #02	1	
5	Passing Plate #1 (Nominal Sized: M2, M2.3, M2.6, M3, M3.5, M4, M5 (M2:W2320, M2.3:W2323, M2.6:W2326, M3:W2330, M3.5:W4540, M4:W4540, M5:W4550))	NJ01008 #03~#09	1	
6	Hex. Socket Head Bolt CF	M2.6x5	1	


© The "Block Assembly" without price cannot be supplied independentl

F

F

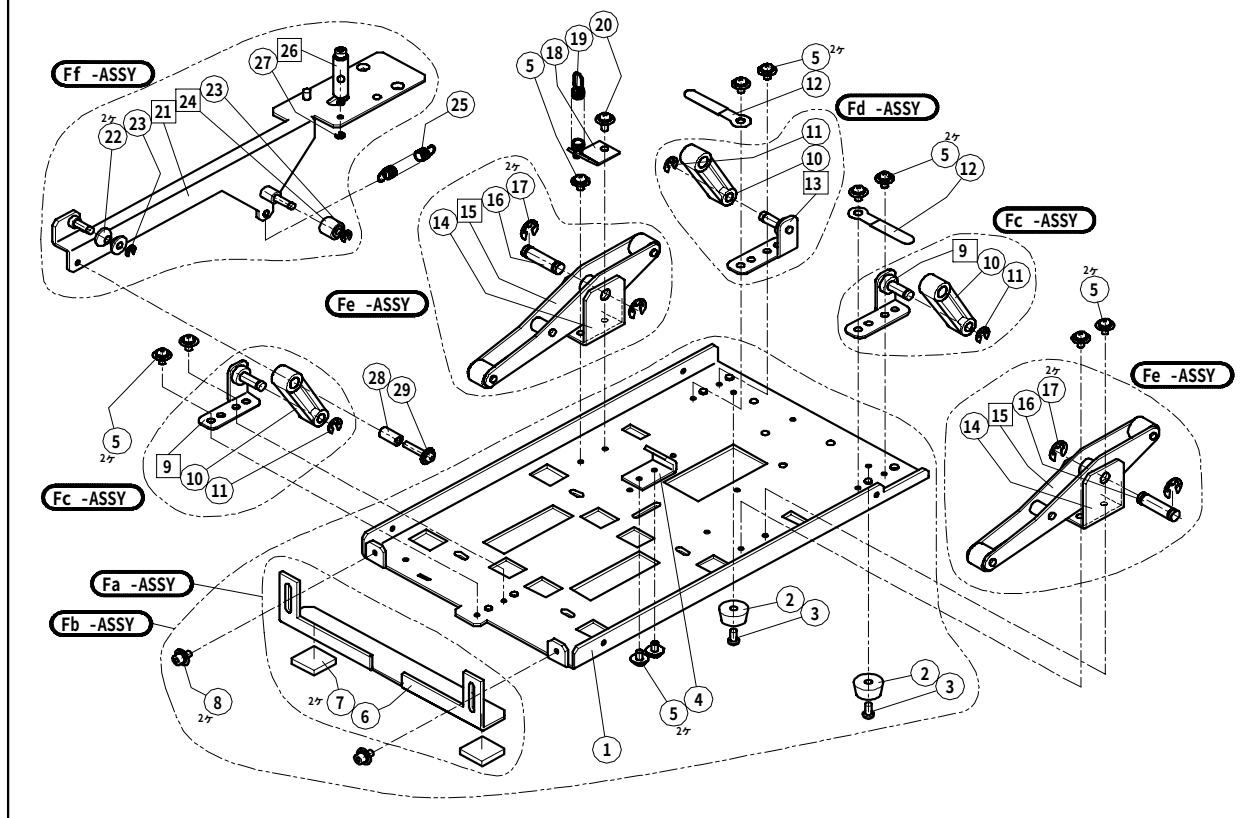

No	Name of Part	Part Number	Q'ty	Unit Price
1	Base	NJ07012g	1	
2	Rubber Foot	K11W	2	
3	Pan Head Screw	M2.6x5	2	
4	Rail Stopper	NJ07015a	1	
5	Pan Head Screw CF	M2.6x5	11	
6	Base Bracket	NJ07014b	1	
7	Bumper	TM-166-8	2	
8	Hex. Socket Head Bolt CF	M2.6x5	2	
9	Rail Link Bracket - Left	NJ03020a	2	
10	Rail Link	NJ03052a	3	
11	E-type Snap Ring	#3	3	
12	Coaching Clip	CS-9	2	
13	Rail Link Bracket - Right	NJ03024a	1	
14	Driving Link Bracket	NJ03011a	2	
15	Driving Link Plate CF	NJ03002b	2	
16	Driving Link Shaft	NJ03018	2	
17	E-type Snap Ring	#4	4	
18	Brush Spring Knob	NJ03053	1	
19	Extension Spring	NJ02041d #01	1	
20	Pan Head Screw CF	M2.6x8	1	
21	Rail Holder #1	NJ03026a	1	
22	Rail Holder #1 Rolle	NJ03031	2	
23	E-type Snap Ring	#2	2	
24	Vibration Rolle	NJ03032a	1	
25	Vibration Spring	HS050-033-0.6	1	
26	Fixing Bolt	NJ03033a	1	
27	E-type Snap Ring	#1.5	1	
28	Brass Spacer	CB-2609E	1	
29	Pan Head Screw CF	M2.6x14	1	
Fa-ASSY	Base Bracket Assembly	NJ07013 #01	1	
Fb-ASSY	Base Assembly	NJ07001b #01	1	
Fc-ASSY	Rail Link - Left Assembly	NJ03005b	1	
Fd-ASSY	Rail Link - Right Assembly	NJ03006b	1	
Fe-ASSY	Drivig Link Plate Assembly	NJ03001b	1	
Ff-ASSY	Rail Holder Assembly	NJ03007b	1	

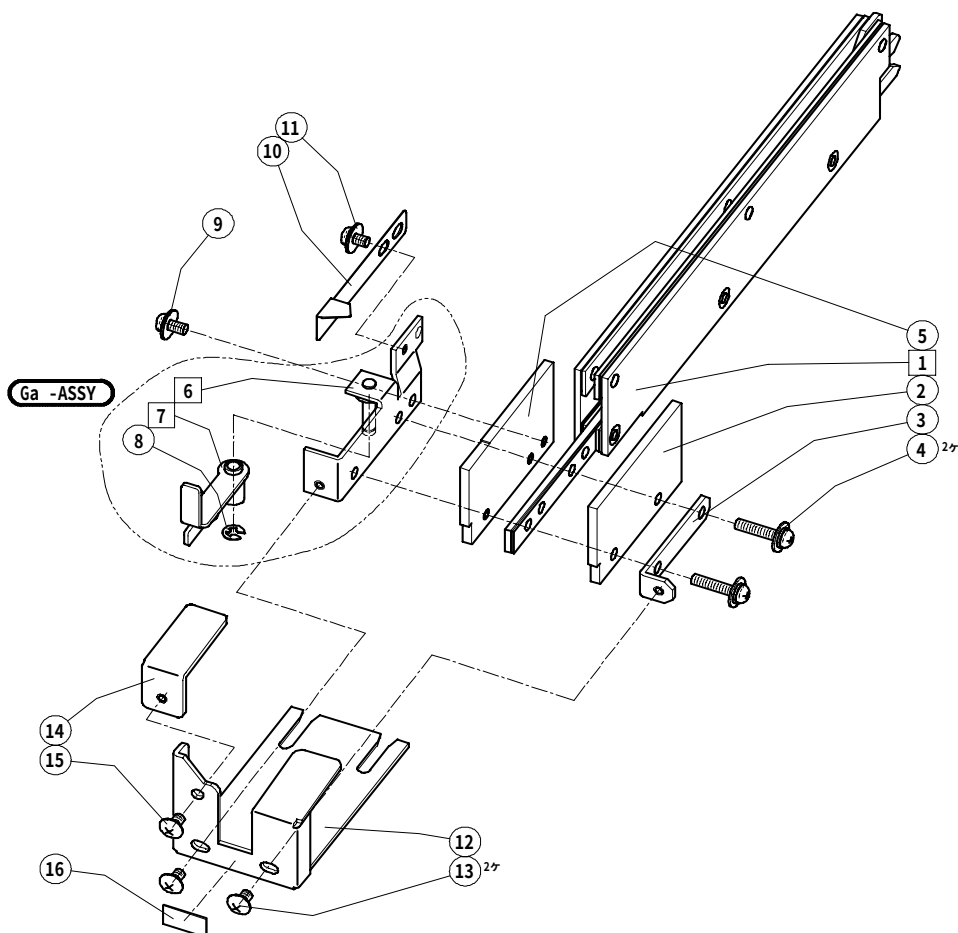

No	Name of Part	Part Number	Q'ty	Unit Price
1	Rail CP (M2:#03, M2.3:#04, M2.6:#05, M3:#06, M3.5:#07, M4:#08, M5:#09)	NJ06004c #03~#09	1	
2	Rail #2 - Right	NJ06023e	1	
3	Rail Front Presser	NJ06018b	1	
4	Pan Head Screw CP (NJ23)	M2.6x12	2	
	Pan Head Screw CP (NJ45)	M2.6x14	2	
5	Rail #2 - Left	NJ06059a	1	
6	Stopper Bracket	NJ06053	1	
7	Switch Link Holder	NJ06056	1	
8	E-type Snap Ring	#2 SUS	1	
9	Pan Head Screw CP	M2.6x5	1	
10	Stopper M3	NJ06057b	1	
11	Pan Head Screw CP	M2.6x4	1	
12	Rail Front Plate M3 (M2-M3)	NJ06019e #01	1	
	Rail Front Plate M5 (M3.5-M5)	NJ06033c #01	1	
13	Plus Truss Head Screw	M2.6x4	2	
14	Screw Guard M3 (M2-M3)	NJ06067	1	
	Screw Guard M5 (M3.5-M5)	NJ06068	1	
15	Plus Truss Head Screw	M2.6x3	1	
16	ID Seal (Rail size)	NJ06071 #03~#09	1	
Ga-ASSY	Stopper Bracket Assembly	NJ06002c	-	

(ACCESSORIES)

No	Name of Part	Part Number	Q'ty	Unit Price
1	AC Adapter		1	
	(No.:RH1200500DJ, IN: AC100V 50/60Hz, OUT: DC12V 0.5A)			
2	Allen Wrench	WRENCH-M2.0	1	
3	Driver	NSN08201	1	
4	Operation Manual	NJ MAJ01	1	
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				


PARTS LIST

“Quicher” (NSB series)


(Precision Screw Feeder)

Available models:-

NSB10, NSB12, NSB14, NSB17,
NSB20, NSB23, NSB26, NSB30,

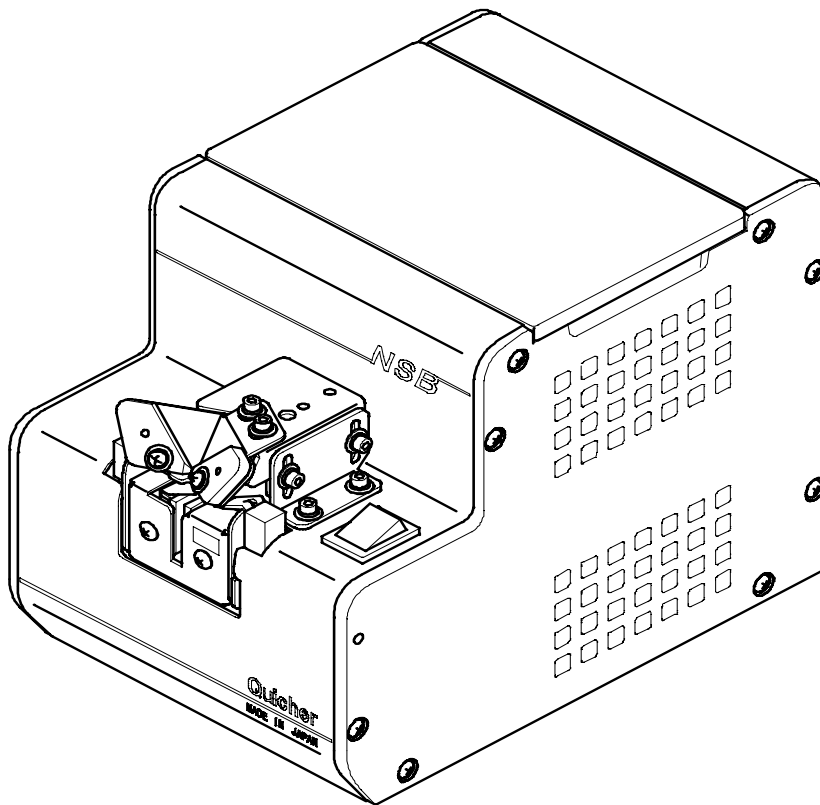


OHTAKE-ROOT KOGYO CO., LTD

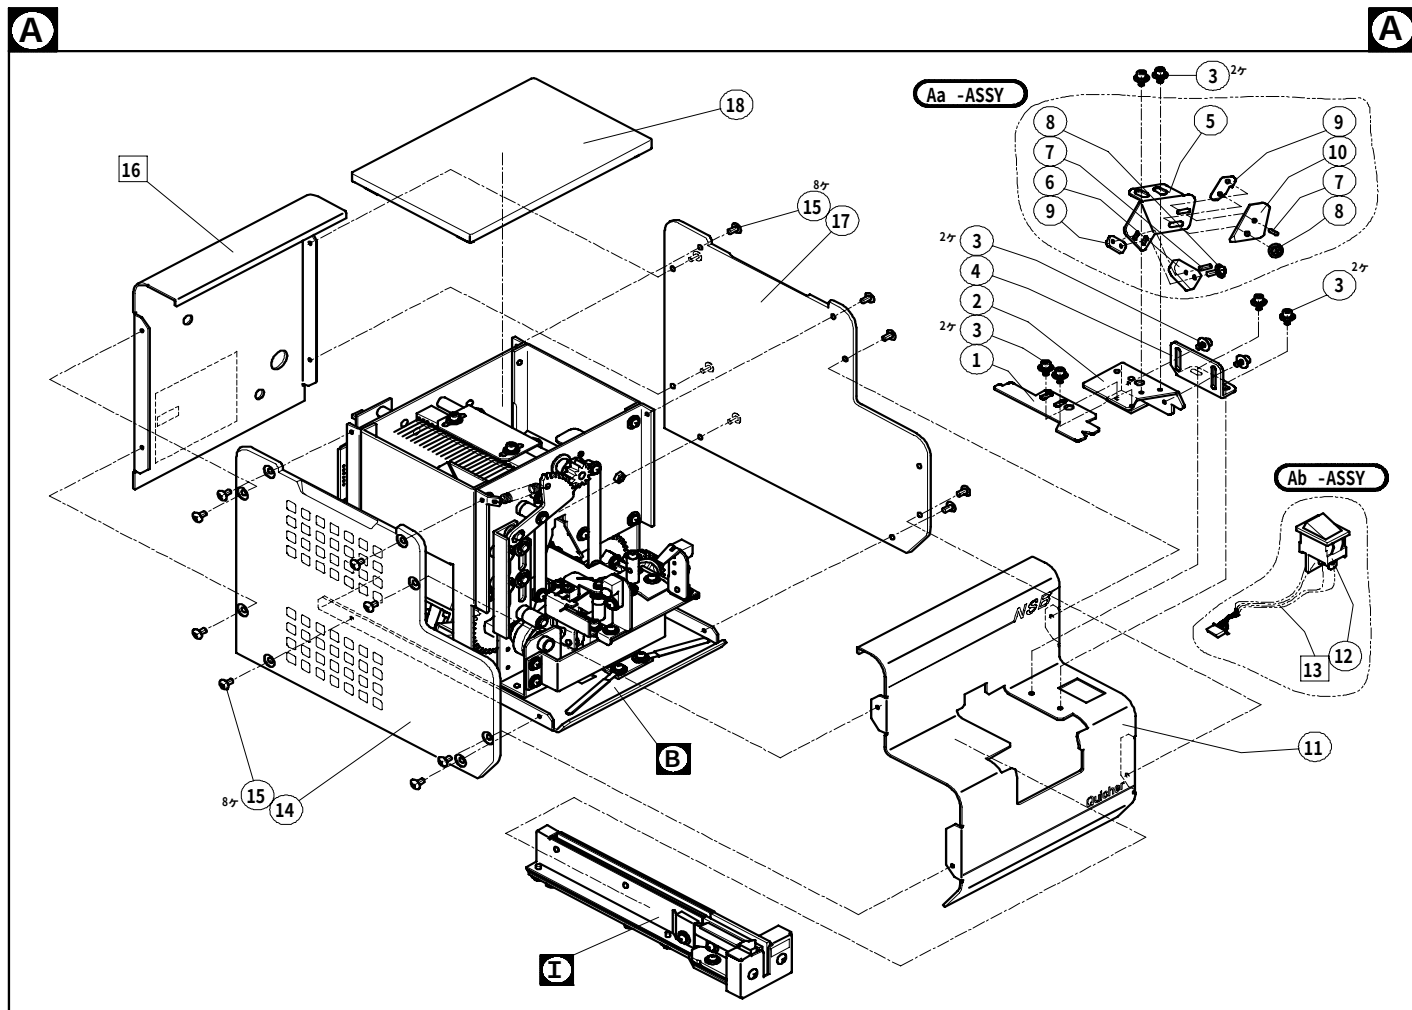

No	Name of Part	Part Number	Q'ty	Unit Price
B	Block "B" Assembly	-	1	
1	Presser Plate (Bit Guide)	NSB06102c	1	
2	Bit Guide Bracket	NSB06103a	1	
3	Hex. Socket Head Bolt CP	M2.6x5	8	
4	Bit Guide Bracket Stopper	NSB06104	1	
5	Bit Guide "B"	NSB06105	1	
6	Guide "L"	NSB06106	1	
7	Spring Pin	2x6	2	
8	Pan Head Screw CP	M2.6x8	2	
9	Stopper Plate "B"	NSB06109a	2	
10	Guide "R"	NSB06107	1	
11	Front Cover	NSB07108b	1	
12	Power Switch	JW-S11RKKR	1	
13	Power Switch Harness	NSB09181 #03	1	
14	Side Cover - Left	NSB07109	1	
15	Plus Truss Head Screw	M2.6x5	16	
※ 16	Rear Cover CP	NSB07001	1	
	(Rear Cover: NSB07103c)	-	-	
17	Side Cover - right	NSB07110	1	
I	Rail CP	NSB05001 #01 ~ #08	1	
	(M1:SR10, M1.2:SR12, M1.4:SR14, M1.7:SR17, M2:SR20, M2.3:SR23, M2.6:SR26, M3:SR30)			
18	Upper Cover	NSB07111	1	
Aa-ASSY	Bit Guide "B" Assembly	NSB06002a	1	
※ Ab-ASSY	Power Switch Assembly	NSB09182 #03	1	

※ When ordering the parts marked with ※, please indicate the serial number printed on the bottom of each unit.


◎ The "Block Assembly" without price cannot be supplied independently.

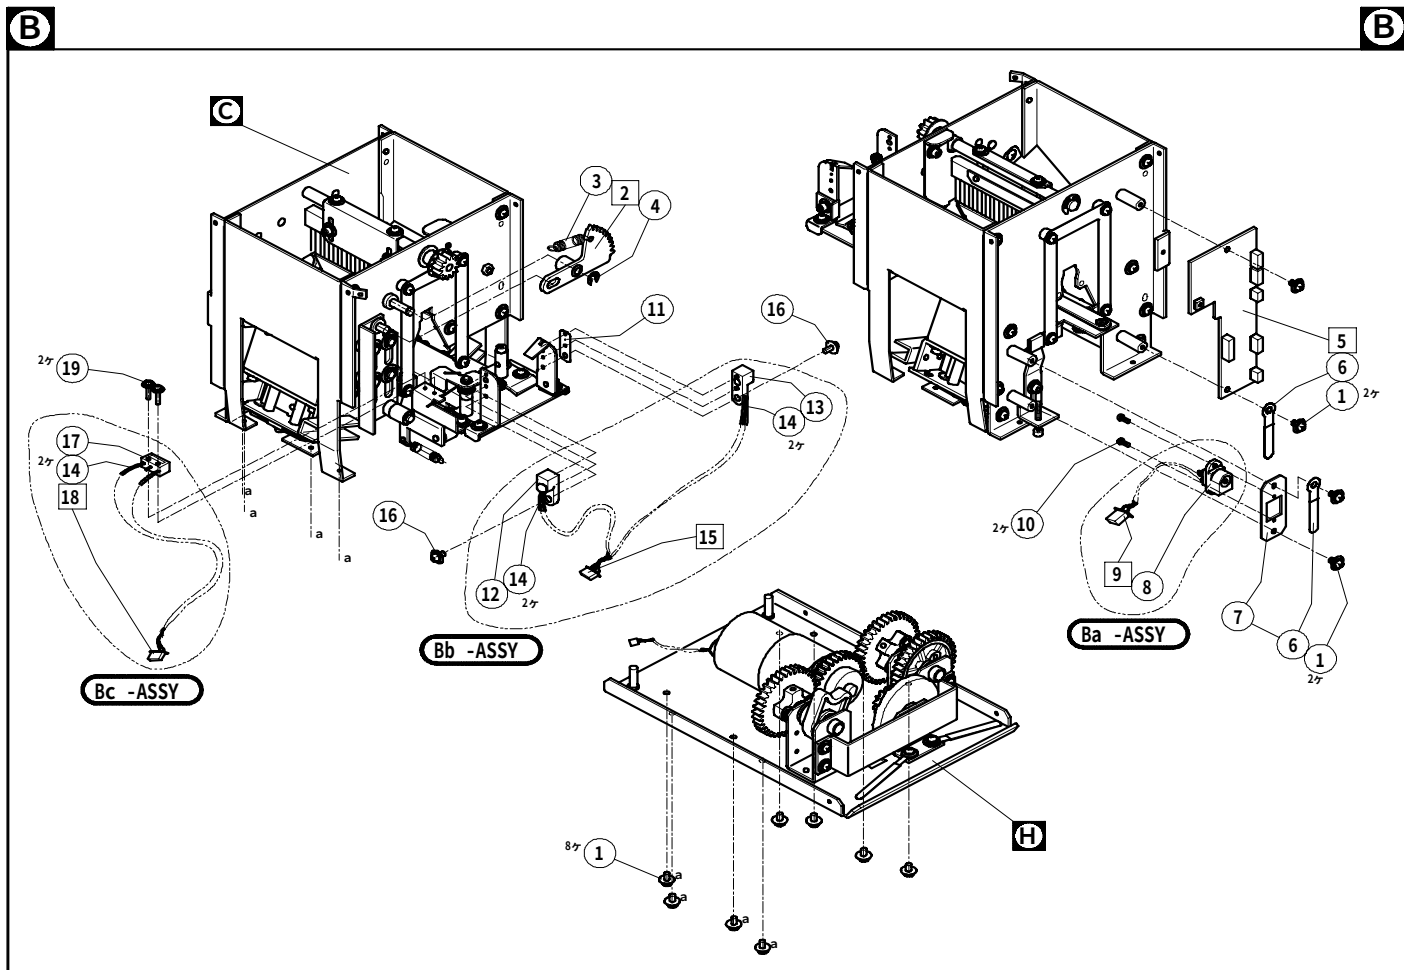

No	Name of Part	Part Number	Q'ty	Unit Price
H	Block "H" Assembly	-	1	
C	Block "C" Assembly	-	1	
1	Pan Head Screw CP	M2.6x5	12	
2	Brush Driving Gear Large	NSB02051a #04	1	
3	Extension Spring	NSB02127 #01	1	
4	E-type Snap Ring	#3 SUS	1	
※ 5	Circuit Board	NSB09101b	1	
6	Coaching Clip	CS-9	2	
7	DC Jack Bracket	NSB02126	1	
8	Power Plug	NJ02033b #02	1	
※ 9	Power Plug Harness	NSB09181 #04	1	
10	Pan Head Screw	M2x5	2	
11	Light Receiver Slit Plate	NSR08621a	1	
12	Light Emitter Sensor	NSB04054	1	
13	Light Receiver Sensor	NSB04055	1	
14	Heat Contraction Tube	φ1x10F	6	
※ 15	Front Sensor Harness	NSB09181 #02	1	
16	Pan Head Screw CP	M2.6x6	2	
17	Micro Switch	D2F-01F	1	
18	Take-Out Sensor Harness	NSB09181 #01	1	
19	Pan Head Screw CP	M2x10	2	
※ Ba-ASSY	Power Plug Assembly	NSB09182 #04	1	
※ Bb-ASSY	Front Sensor Assembly	NSB09182 #02	1	
※ Bc-ASSY	Take-Out Sensor Assembly	NSB09182 #01	1	

※ When ordering the parts marked with ※, please indicate the serial number printed on the bottom of each unit.

◎ The "Block Assembly" without price cannot be supplied independently.

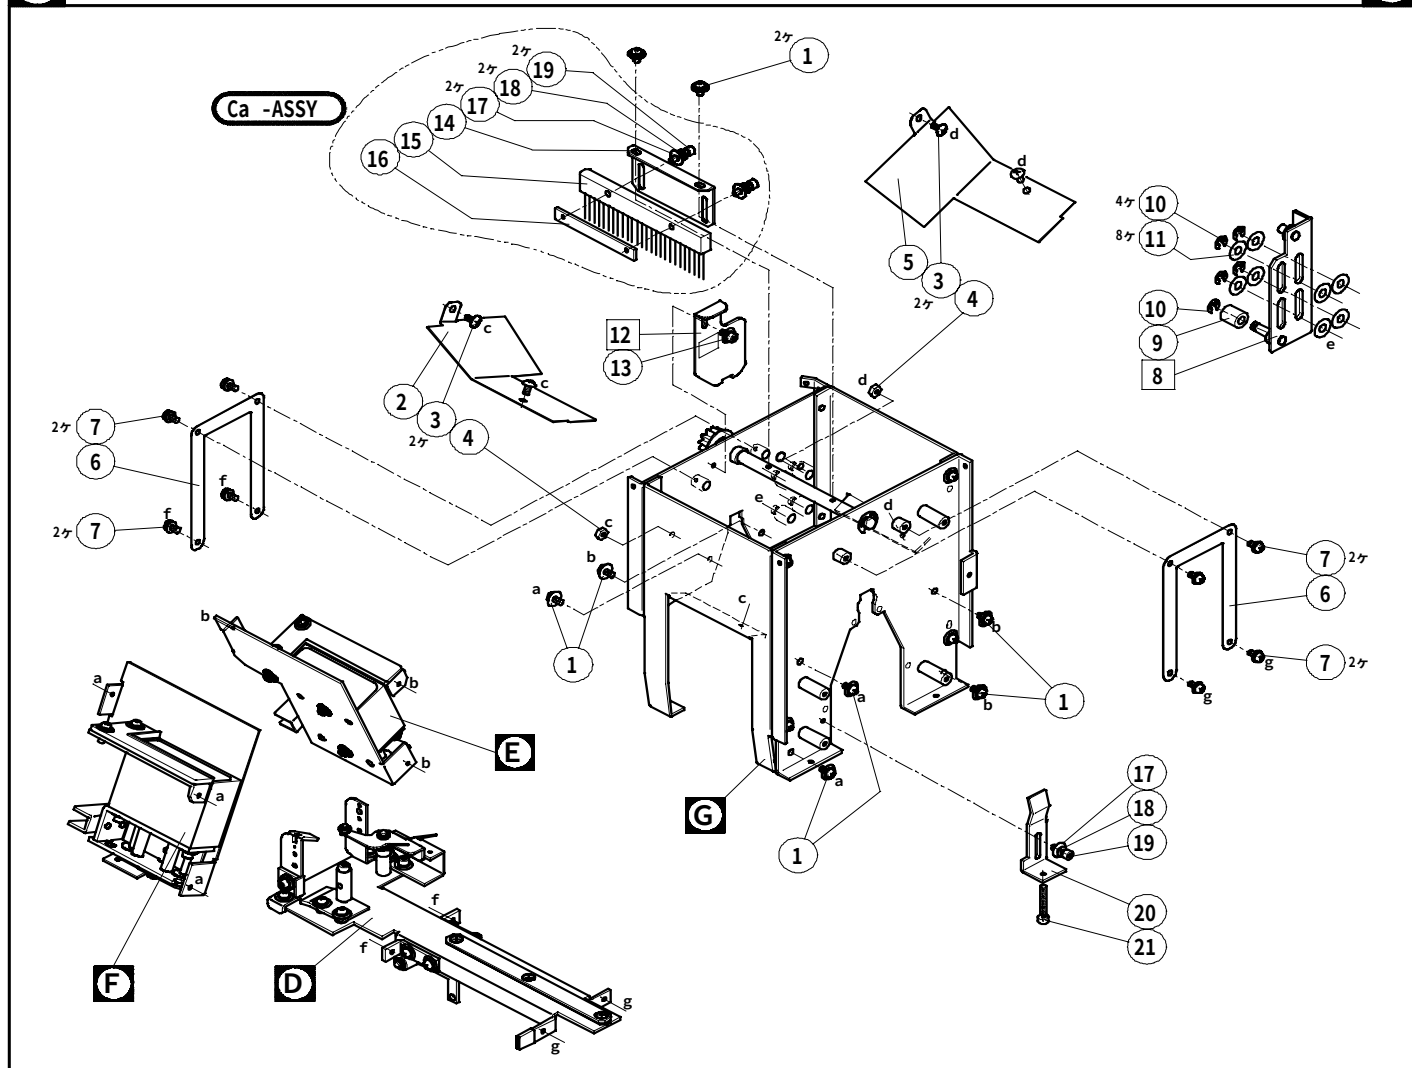


No	Name of Part	Part Number	Q'ty	Unit Price
G	Block "G" Assembly	-	1	
F	Block "F" Assembly	-	1	
E	Block "E" Assembly	-	1	
1	Pan Head Screw CP	M2.6x5	8	
2	Slant Plate - Right	NSB02122c	1	
3	Plus Truss Head Screw	M2.65x5	4	
4	Hex. Nut	M2.6	2	
5	Slant Plate - Left	NSB02123c	1	
6	Vibration Plate	NSB02116 #01	2	
7	Pan Head Screw CP	M2.6x4	8	
8	Brush Driving Plate	NSB02051a #03	1	
9	Bush Driving Plate Roller	NSB02108	1	
10	E-type Snap Ring	#3 SUS	5	
11	Polyurethan Slider	NSB02128 #01	8	
D	Block "D" Assembly	-	1	
12	Passing Window (M1-M17)	NSB02052 #01	1	
	Passing Window (M2-M3)	NSB02052 #02		
13	Hex. Socket Head Bolt CP	M2.6x5	1	
14	Brush Bracket #1	NSB02111	1	
15	Brush	NSB02110a #01	1	
16	Brush Bracket #2	NSB02112a	1	
17	Plain Washer	M2.6	3	
18	Spring Washer	M2.6	3	
19	Hex. Socket Head Bolt	M2.6x10	3	
20	Vibraton Adjusting Plate	NSB02114	1	
21	Adjusting Screw	NSB02125	1	
Ca-ASSY	Brush Assembly	NSB02053	1	


◎ The "Block Assembly" without price cannot be supplied independently

D

D

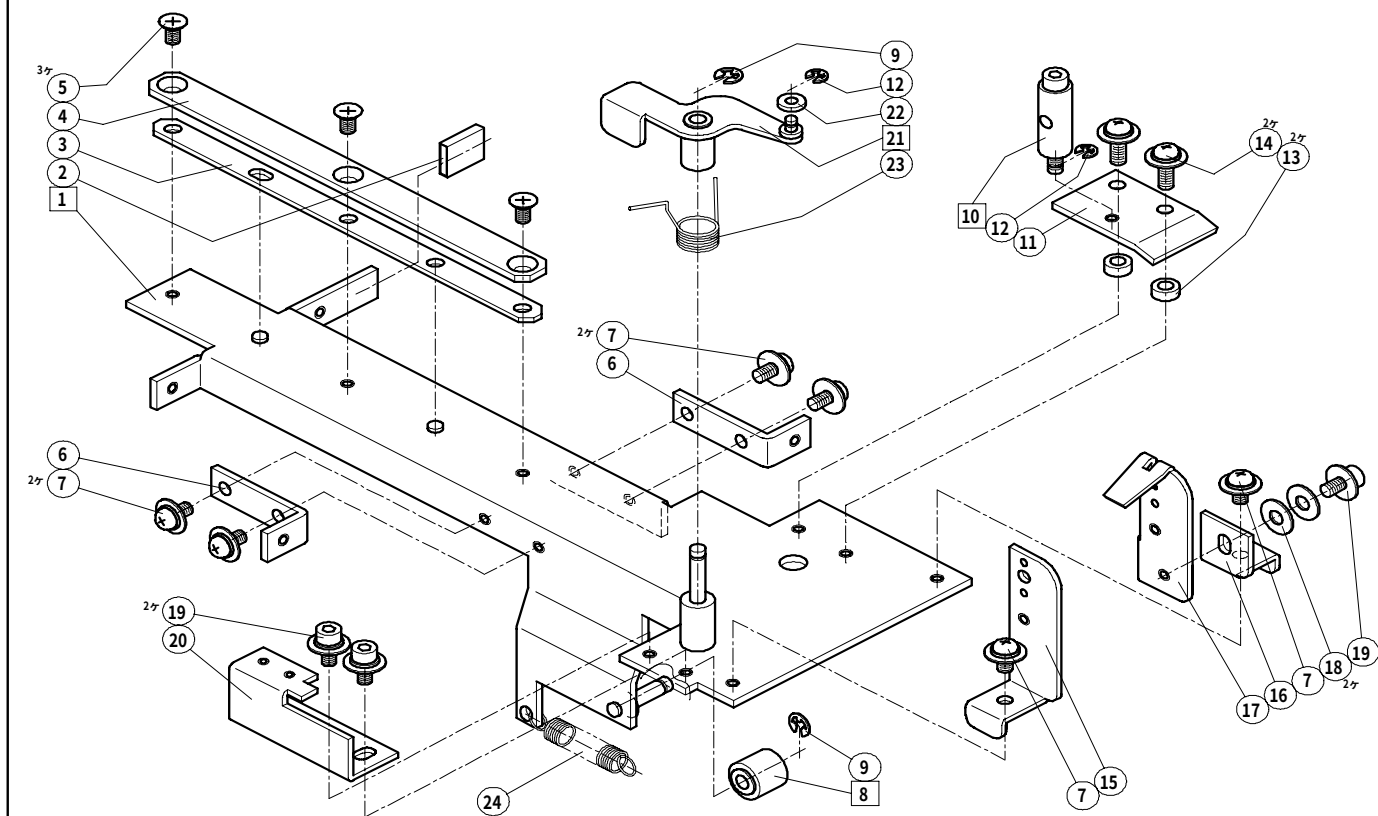


No	Name of Part	Part Number	Q'ty	Unit Price
1	Rail Holder	NSB04051 #01	1	
2	Heat Contraction Tube	φ5x9F	1	
3	Rail Holder Spacer	NSB04103a	1	
4	Rail Holder Guide Spacer	NSB04104	1	
5	Plus Socket Head Screw	M2.6x5†	3	
6	Rail Holder Setter	NSB04102a	2	
7	Pan Head Screw CP	M2.6x5	6	
8	Vibration Roller	NSB04106	1	
9	E-type Snap Ring	#2 SUS	2	
10	Rail Holder Fixing Bolt	NSB04053	1	
11	Rail Holder Fixing Plate	NSB04107	1	
12	E-type Snap Ring	#1.5 SUS	2	
13	Brass Spacer	CB-2602E	2	
14	Pan Head Screw CP	M2.6x8	2	
15	Sensor Bracket - Left	NSB04110a	1	
16	Sensor Bracket - Right #1	NSB04111	1	
17	Sensor Bracket - Right #2	NSB04112b	1	
18	Plain Washer	M2.6	2	
19	Hex. Socket Head Bolt CP	M2.6x5	3	
20	Switch Bracket	NSB04118	1	
21	Switch Link	NSB04051 #02	1	
22	Duracon Spacer	C-2001	1	
23	Switch Link Spring	NSB04119	1	
24	Extension Spring	NSB04120 #01	1	

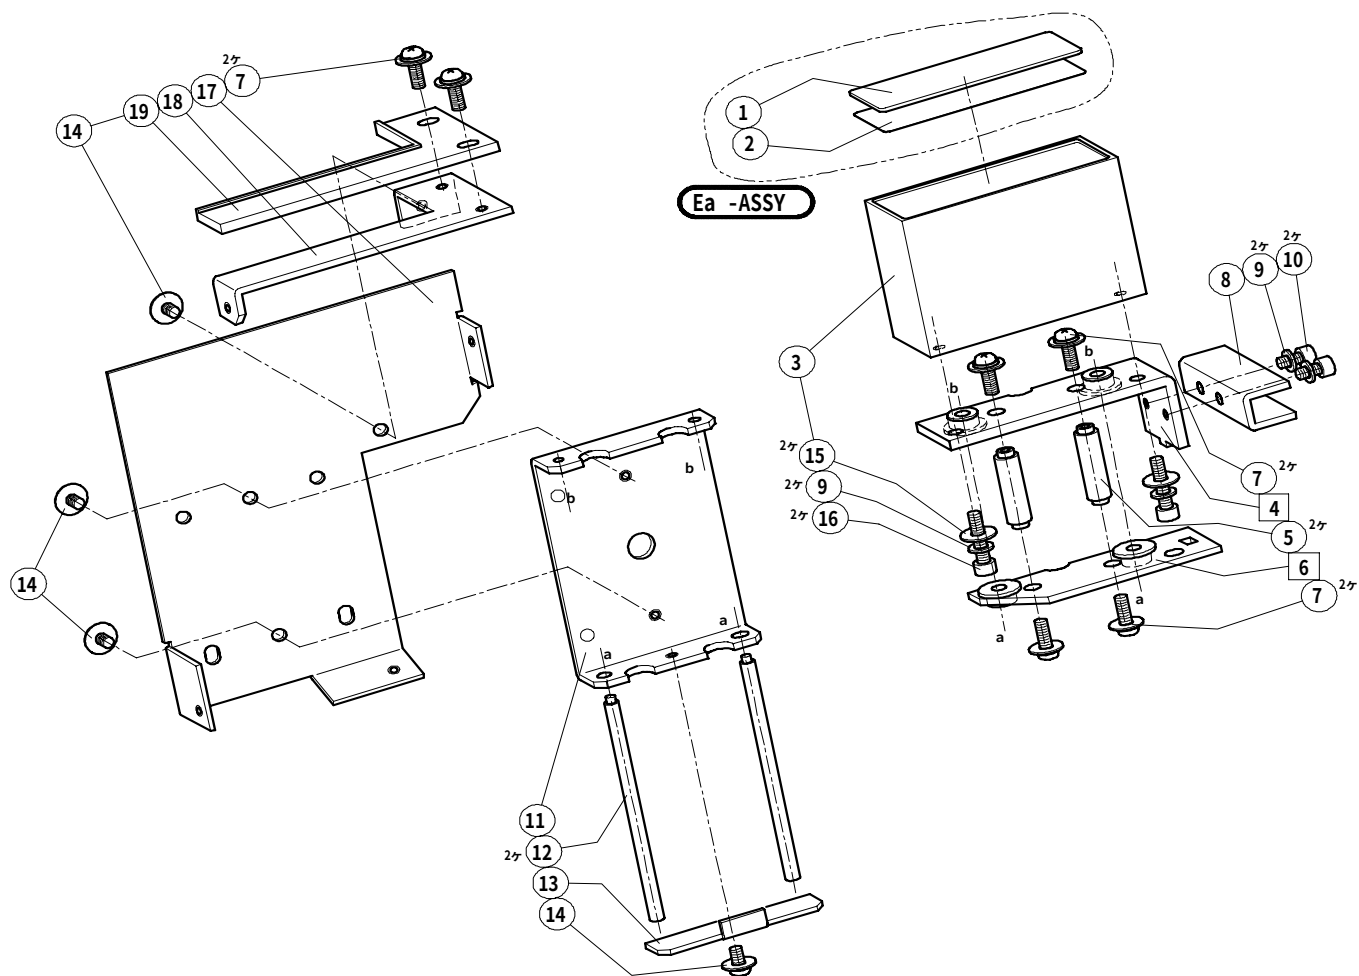


No	Name of Part	Part Number	Q'ty	Unit Price
1	Hopper Upper Plate	NSB01131	1	
2	Double Coated Tape	NSB01132	1	
3	Hopper	NSB01120b	1	
4	Driving Holder Plate - Left	NSB01051a #04	1	
5	Spacer Shaft	NSB01107a	2	
6	Baffler - Left	NSB01051a #05	1	
7	Pan Head Screw CP	M2.6x8	6	
8	Driving Holder Slit Plate	NSB01108	1	
9	Spring Washer	M2.6	4	
10	Hex. Socket Head Bolt	M2.6x5	2	
11	Shaft Bracket - Left	NSB01124	1	
12	Hopper Shaft	NSB01110	2	
13	Hopper Shaft Presser	NSB01111	1	
14	Pan Head Screw CP	M2.6x5	4	
15	Plain Washer	M2.6	2	
16	Hex. Socket Head Bolt	M2.6x12	2	
17	Hopper Wall - Left	NSB01114	1	
18	Slint Plate Holder Bracket - Left	NSB01117a	1	
19	Slint Plate Holder - Left	NSB01122	1	
Ea-ASSY	Hopper Upper Plate Assembly	NSB01121a	1	

F

F

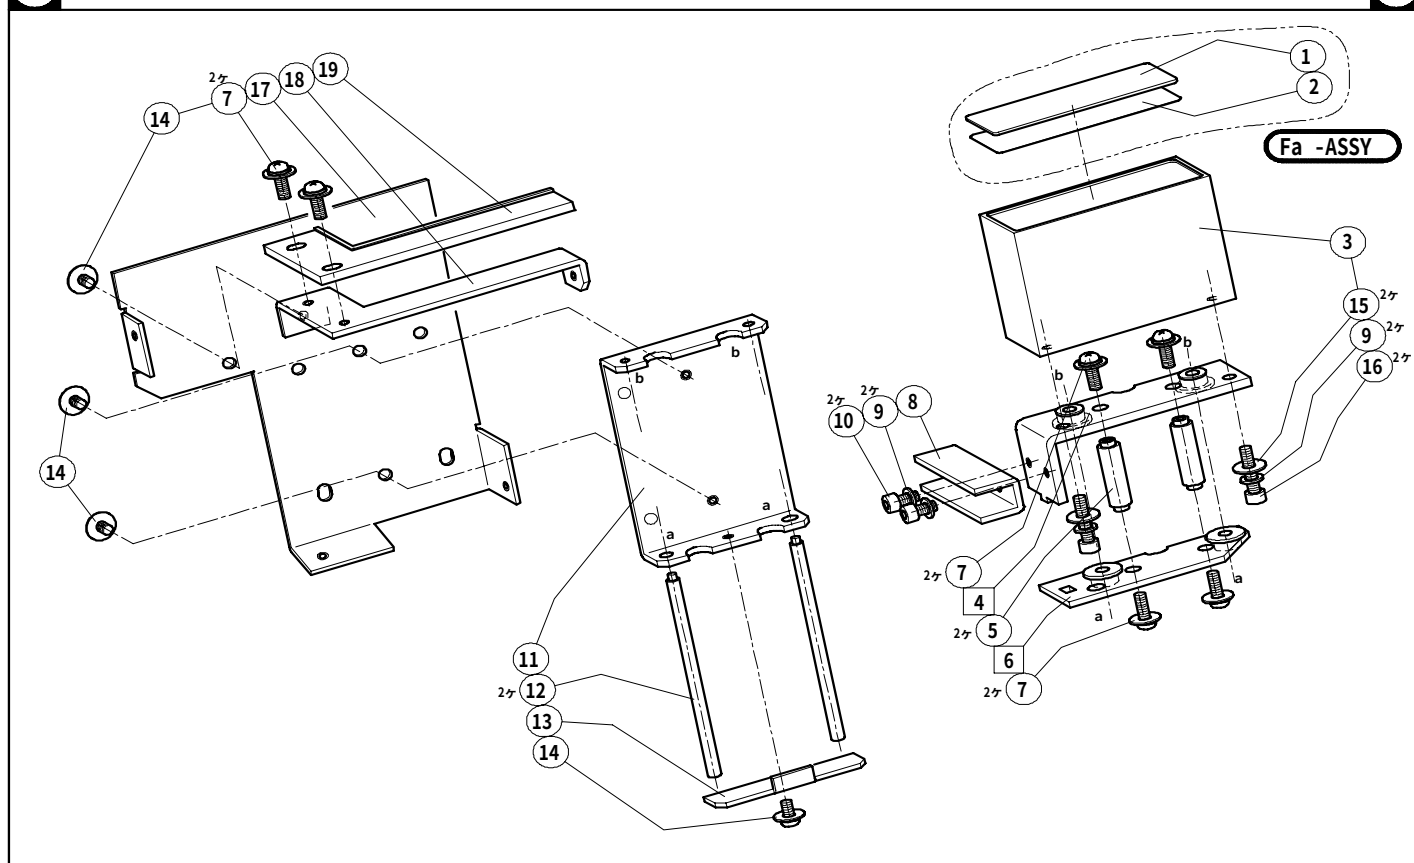


No	Name of Part	Part Number	Q'ty	Unit Price
1	Hopper Upper Plate	NSB01131	1	
2	Double Coated Tape	NSB01132	1	
3	Hopper	NSB01120b	1	
4	Driving Holder Plate - Left	NSB01051a #02	1	
5	Spacer Shaft	NSB01107a	2	
6	Baffler - Left	NSB01051a #03	1	
7	Pan Head Screw CP	M2.6x8	6	
8	Driving Holder Slit Plate	NSB01108	1	
9	Spring Washer	M2.6	4	
10	Hex. Socket Head Bolt	M2.6x5	2	
11	Shaft Bracket - Right	NSB01109	1	
12	Hopper Shaft	NSB01110	2	
13	Hopper Shaft Presser	NSB01111	1	
14	Pan Head Screw CP	M2.6x5	4	
15	Plain Washer	M2.6	2	
16	Hex. Socket Head Bolt	M2.6x12	2	
17	Hopper Wall - Right	NSB01113	1	
18	Slint Plate Holder Bracket - Right	NSB01116a	1	
19	Slint Plate Holder - Right	NSB01123	1	
Fa-ASSY	Hopper Upper Plate Assembly	NSB01121a	1	

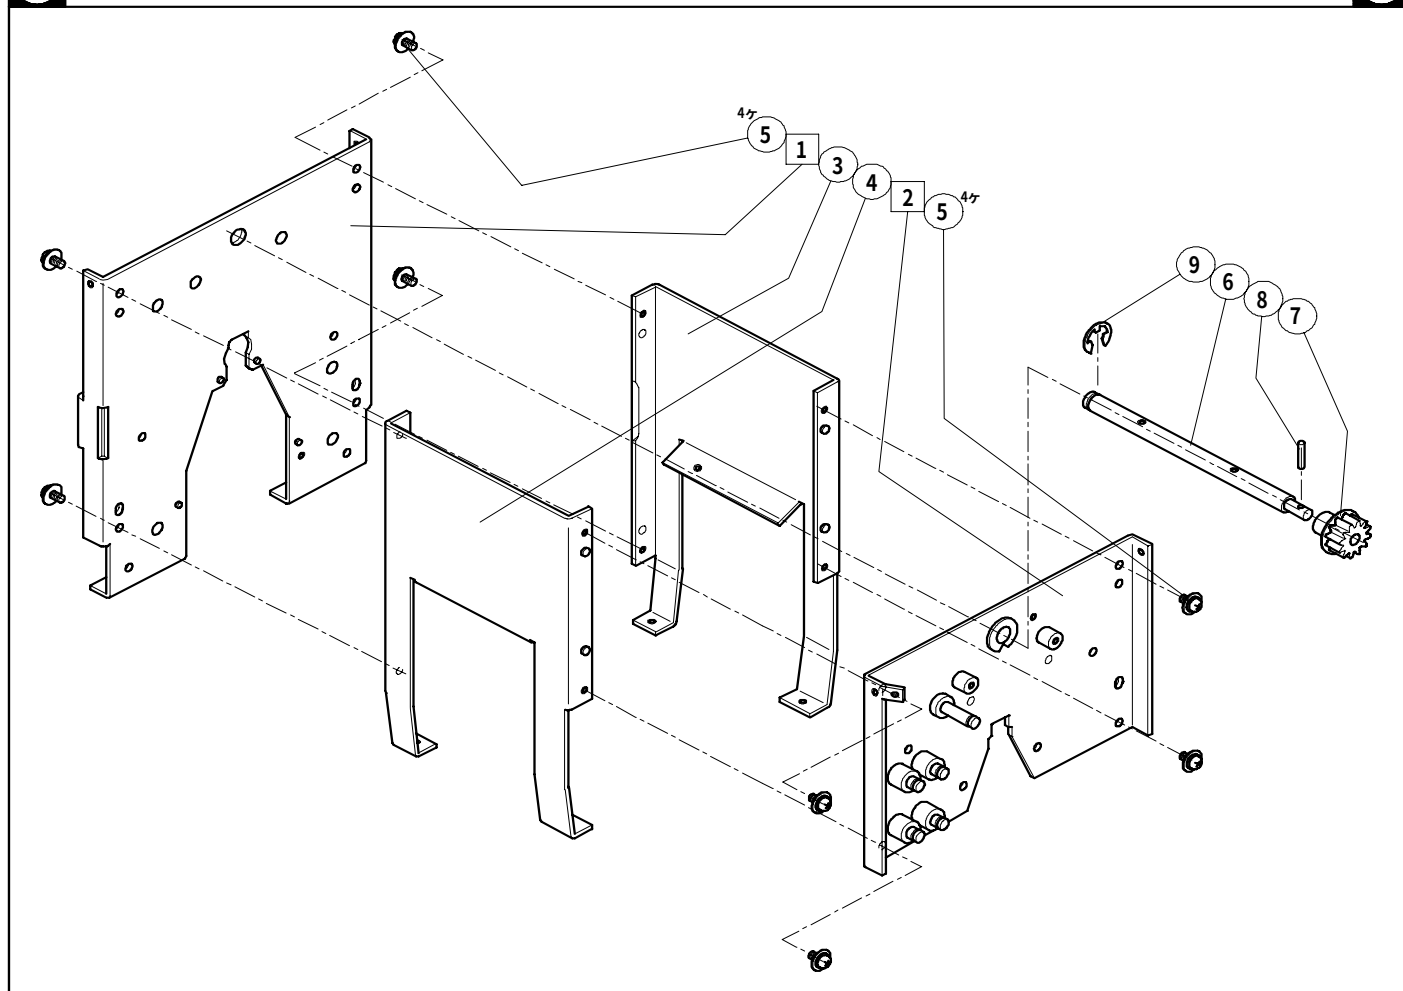


No	Name of Part	Part Number	Q'ty	Unit Price
※ 1	Rear Hopper Wall	NSB02051b #1a	1	
2	Front Hopper Wall	NSB02051b #02	1	
3	Right Hopper Wall	NSB02120c	1	
4	Left Hoppe Wall	NSB02121c	1	
5	Pan Head Screw CP	M2.6x5	8	
6	Brush Shaft	NSB02102	1	
7	Brush Driving Gear Small	NSB02101a	1	
8	Spring Pin	2x8	1	
9	E-type Snap Ring	#5 SUS	1	

※ When ordering the parts marked with ※, please indicate the serial number printed on the bottom of each unit.

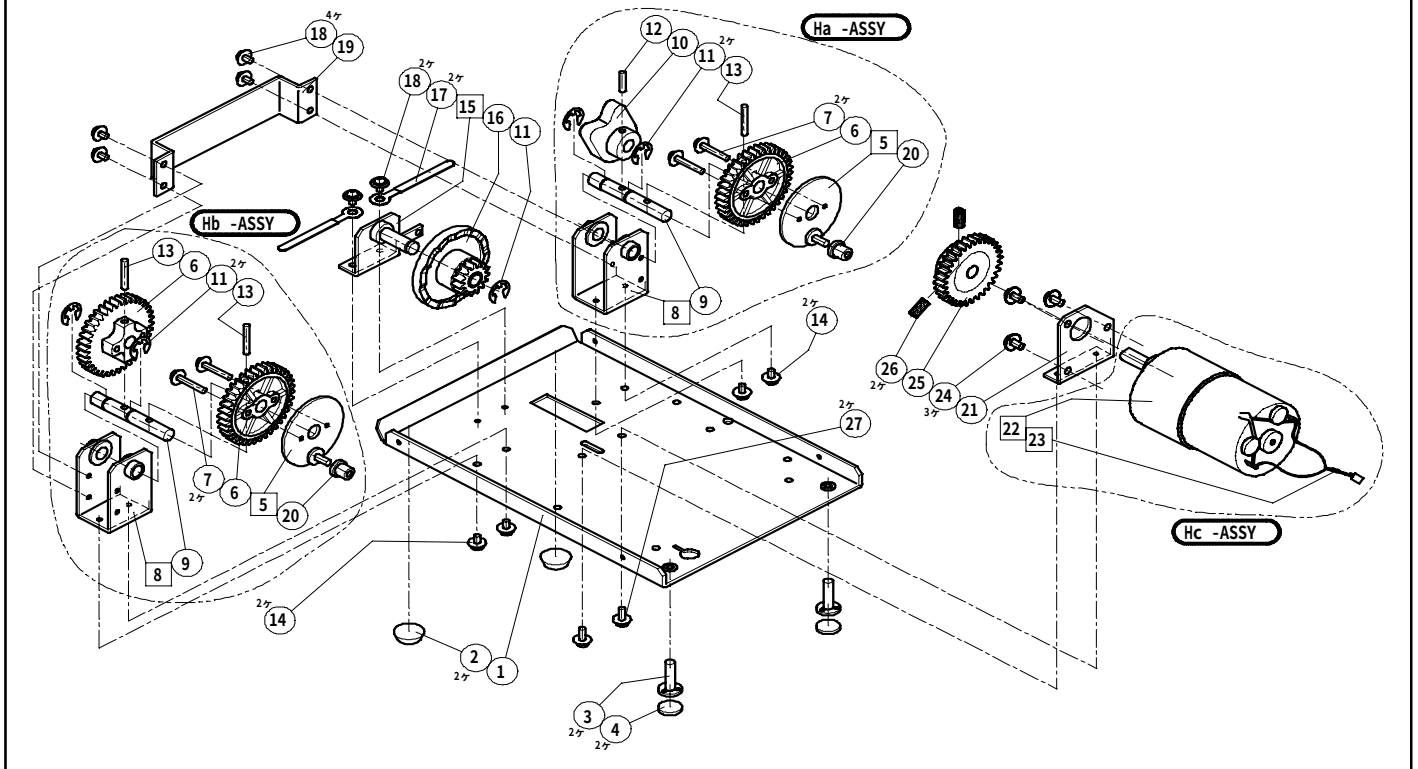

No	Name of Part	Part Number	Q'ty	Unit Price
1	Base	NSB07107a	1	
2	Bunper	TM-166-12	2	
3	Weld Bolt	M4x5	2	
4	Urethane Roll Stock	TM-182-816-10	2	
5	Rotating Disc	NSB03051a #01	2	
6	Driven Gear	NSB03104	3	
7	Pan Head Screw CP	M2.6x16	4	
8	Driving Shaft Bracket	NSB03051a #03	2	
9	Driving Shaft	NSB03109	2	
10	Brush Cam	NSB03113	1	
11	E-type Snap Ring	#5 SUS	5	
12	Spring Pin	2.5x14	1	
13	Spring Pin	2.5x20	3	
14	Pan Head Screw CP	M2.6x5	4	
15	Vibration Cam Bracket	NSB03051a #02	1	
16	Vibration Cam	NSB03110	1	
17	Coaching Clip	CS-1	2	
18	Pan Head Screw CP	M2.6x5	6	
19	Driving Shaft Bracket Supporter	NSB03114	1	
20	Driving Roller	NSB03107	2	
21	Main Motor Bracket	NSB03101	1	
22	Main Motor with Condensor	NJ04005a	1	
※ 23	Main Motor Harness	NSB09181 #05	1	
24	Pan Head Screw CP	M3x6	3	
25	Driving Gear	NSB03103	1	
26	Hex. Socket head Screw CP	M4x8	2	
27	Pan Head Screw CP	M2.6x8	2	
Ha-ASSY	Driving Shaft Bracket Assembly - Left	NSB03053	1	
Hb-ASSY	Driving Shaft Bracket Assembly - right	NSB03054	1	
※ Hc-ASSY	Main Motor Assembly	NSB09182 #05	1	

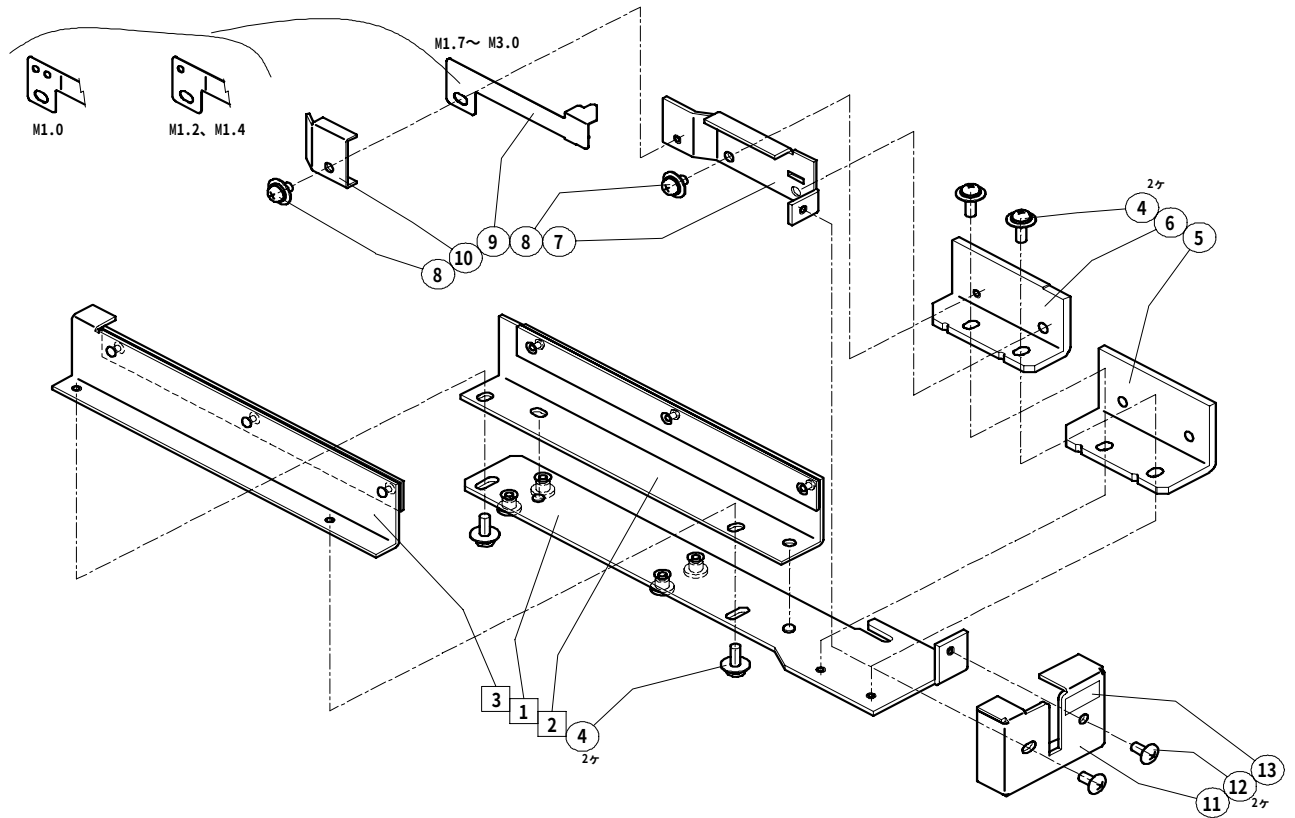

No	Name of Part	Part Number	Q'ty	Unit Price
1	Rail Bracket Base	NSB05051	1	
2	Rail - Right	NSB05052b #02 ~ 09	1	
	(M1: #02, M1.2: #03, M1.4: #04, M1.7: #05, M2: #06, M2.3: #07, M2.6: #08, M3: #09)			
3	Rail - Left	NSB05053b #02 ~ 09	1	
	(M1: #02, M1.2: #03, M1.4: #04, M1.7: #05, M2: #06, M2.3: #07, M2.6: #08, M3: #09)			
4	Pan Head Screw CP	M2.6x8	4	
5	Front Rail - Right	NSB05106c	1	
6	Front Rail - Left	NSB05107c	1	
7	Stopper Bracket	NSB05109	1	
8	Pan Head Screw CP	M2.6x4	2	
	Stopper: M10	NSB05113b		
	Stopper: M12, M14	NSB05114b		
	Stopper: M17-M10	NSB05115b		
10	Stopper Setting Plate	NSB05110	1	
11	Rail Front Cover	NSB05111	1	
12	Plus Truss Head Screw	M2.6x5	2	
13	ID Seal (Rail)	NSB05120 #01 ~ #08	1	

(ACCESSORIES)

No	Name of Part	Part Number	Q'ty	Unit Price
1	AC Adapter (No.:RH-1200500DJ, IN:AC100V 50/60Hz, OUT:DC12V 0.5A)	AD-JP	1	
2	Gauge	NSB06110	1	
3	Allen wrench	WRENCH-M2.0	1	
4	Driver	NSN08201	1	
5	Operation Manual	NSBMAJ01	1	
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				